



THE HONG KONG STANDARDS AND TESTING CENTRE LTD.
EC DECLARATION OF CONFORMITY

Reference Number: EMC0704458DOC

Taising Hearing Amplifier Limited
Flat C, 15/F., Phase 1, Golden Dragon Ind. Ctr.,
152-160 Tai Lin Pai Road,
Kwai Chung, N.T., Hong Kong

Description: Mini Whisper Hearing
Brand Name: N/A
Model: TS-MW2000

complies with the requirements of the
EC Council Directive on electromagnetic compatibility 2004/108/EC

Applicable Standard(s) with amendments:

EN55013: 2001 +A1: 2003 +A2: 2006
EN55020: 2007

General Remarks:

This declaration is only valid when used in conjunction with the technical file(s) refers to HM160005

This declaration applies specifically to the sample(s) investigated in the technical report mentioned above, and not to the bulk

The CE marking as shown below can be affixed on the product after preparation of necessary conformity documentation, as stipulated in Articles of the Council Directive 2004/108/EC


Manufacturer/Importer

Signature



Test Laboratory

Dr. LEE Kam Ching
ElectroMagnetic Compatibility Department
For and on behalf of
The Hong Kong Standards and Testing Centre Ltd.

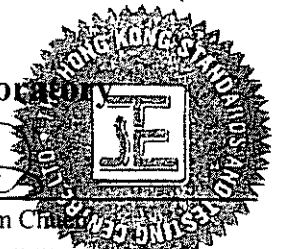


www.hkstc.org

Date of Issue: 2007-09-13




SOUND AMPLIFIER™

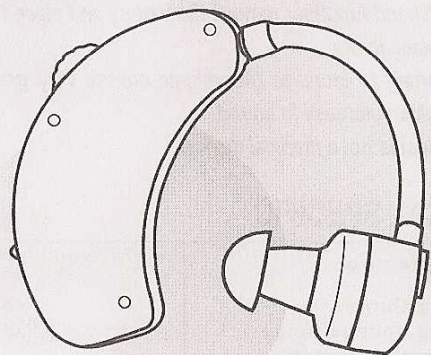

TS-MW-2000

User Manual

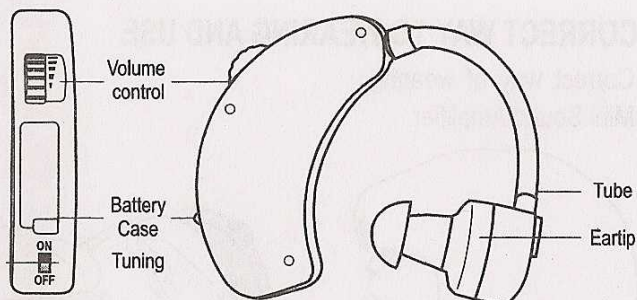

INSTRUCTIONS FOR USE

Turn the volume control to low level.

Check the battery is in place.


Place the hearing into your ear left or right.

Turn the switch to ON. Increase volume control as your suitable level. (Don't use your hand cover the unit, it will be made the high noise pitch) .

ON / OFF SWITCH

The correct positions of the switch are as shown below.

The switch should be turned to the "OFF" position when the apparatus is not in use. This will ensure longer battery life.



VOLUME CONTROL


There are volume control from LOW to HIGH.



BATTERY INSTALLATION


Open the battery hatch with the finger tip and insert the battery as shown (Use 1.5V LR-44 battery).

Battery direction must be insert in right postion.

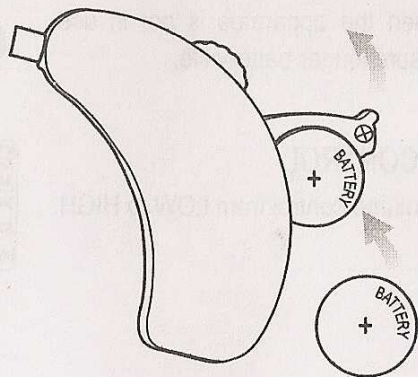

CORRECT WAY TO WEARING AND USE

Correct way of wearing
Mini Sound Amplifier.

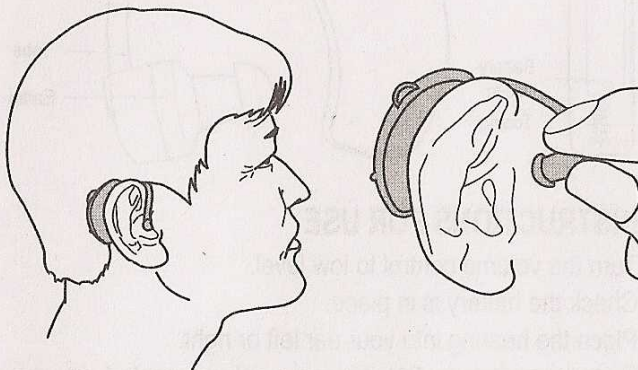

Eartip must be inserted deeply into the ear.
Make sure ear tip is tight and the tips is pushed fully on
the unit.

CAUTION

1. *The products is not water proof therefore the users must take care to prevent water form entering the unit. Should water enter the Mini Sound Amplifier remove the battery and place the unit in a warm place to dry.*
2. *It is important to increase the volume control very gradually to avoid sudden increase in sound.*
3. *This product is not a medical device.*

TECHNICAL SPECIFIC

Battery Life time	>24 Working Hours (LR-44 1PC)
Operating Current	<8.4mA
Operating Voltage range	1.0~1.6V
Weight(include battery)	10g
Frequency Band Width	100~12K(Hz)±6dB
SSPL90dB	130dB
Full-on Gain dB	105dB
Harmonic distortion%	<5.3%
Equivalent input noise Level	<44dB